


KRISTINA DAM
Studio

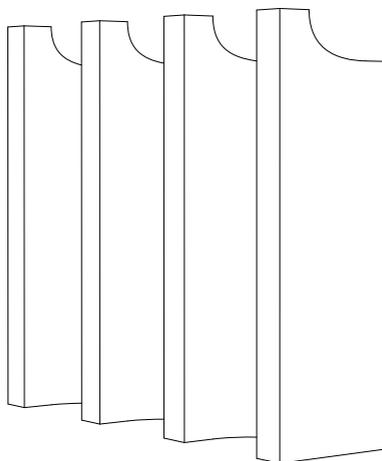

COLUMN COAT RACK

Oiled Solid Oak/Black Lacquered Oak
21 x 18 x 5,5 cm

1 x Screw




1 x Hex Key L



Tool + 2 x Screws (not included)



1.

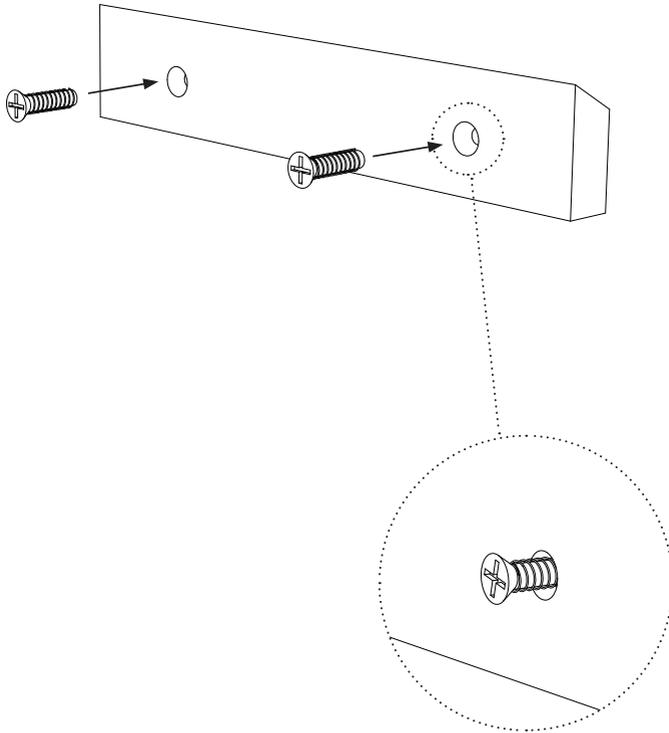


Screw the wooden bracket to the wall with 2 screws.

Screws for the wall are not included since different wall materials require different types of fixing devices. Use fixing devices suitable for the walls in your home. Always consult a professional, if in doubt.

Tool + 2 x Screws (not included)





2.

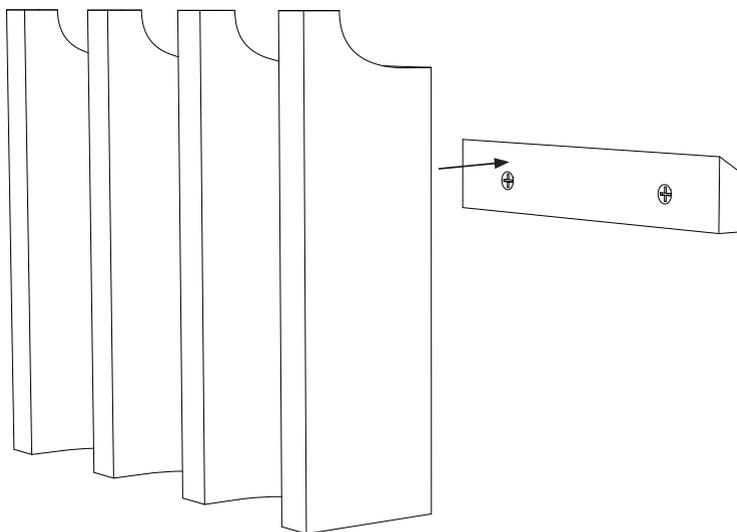

Hang the Column Coat Rack on the wall, by sliding it over the wooden bracket.



3.

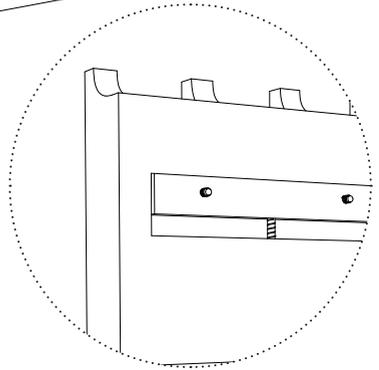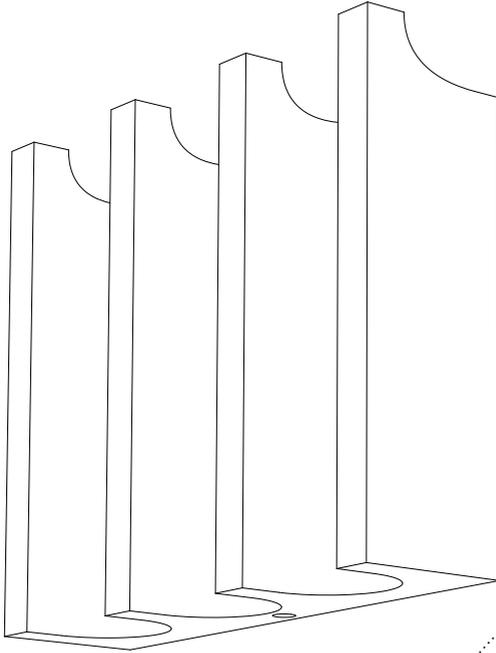

ScREW the included screw with help of the Hex Key into the hole of the bottom of the Column Coat Rack. Tighten the screw till it hits the wall bracket. It will help to hold the column coat rack safe to your wall.

1 x Screw + 1 x Hex Key L

